
Attach TV to Wall Plate

3.1 Unlock the Wall Plate

Press the button on wall plate 05 to release the safety latch.

NOTE: "L" pin is provided to release or engage the safety latch when your TV is installed.

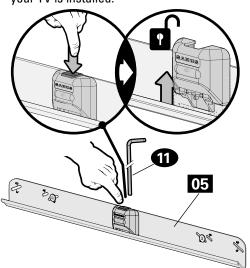



3.2 Hang Your TV

HEAVY! Use assistance with this step.

Use two people to hang the TV, to visually ensure TV bracket 01 is hung correctly onto wall plate 05 (see side view).

MPORTANT: DO NOT lower TV straight down onto wall plate **05** -- this will engage the lock. Safety latch must be released for proper installation (See STEP 3.1).

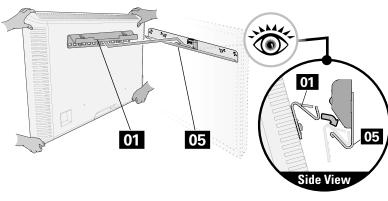

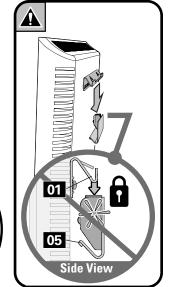


3.3 Lock the Wall Plate


Press down on the safety latch until the button pops up AND you hear a "click".

NOTE: If needed, use "L" pin 11 to engage the safety latch.

A CAUTION: Avoid potential personal injury or property damage! The safety latch must be locked, so the TV is securely fastened to the wall plate 05

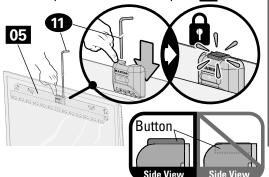



3.4 No Tilt Feature (OPTIONAL)

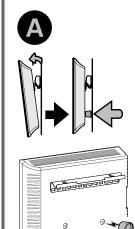


Place magnetic leveling feet 09 in the lower corners of the TV.

 For non-metal back




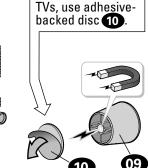

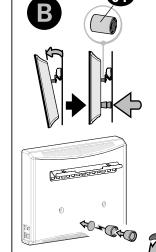

If you used spacers **04** in STEP 1.2. stack both magnetic leveling feet 09 together and place in the lower center of the TV.


For non-metal back TVs, use adhesivebacked disc 10.

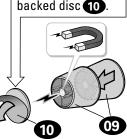

Adiustments


Lateral Shift

 Slide the TV side to side Make sure your TV is locked to wall plate 05 (STEP 3.3).




Level

 Remove the TV. Loosen both screws 08 adjust level, then retighten the screws (STEP 2).




Remove the TV

 Disconnect your cables. Unlock wall plate 05 (STEP 3.1). Lift the TV up and away.




Dimensions (in.[mm])

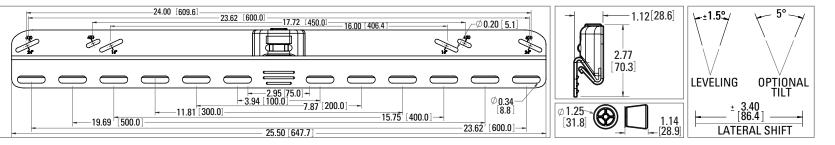



ALL1 Instruction Manual

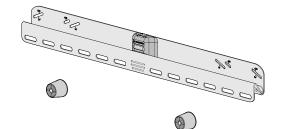





Get it right the first time. HeightFinder™ shows you where to drill



 
Our US-based install experts are standing by to help.

 




Thank you for choosing Sanus Accents! Please take a moment to let us know how we did:

Call us: 1-800-359-5520





Find us on Facebook: SANUS



Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2024 Milestone AV Technologies. All rights reserved. Sanus is a division of Milestone All other brand names or marks are used for identification purposes and are trademarks of their respective owners

SANUS • 6436 City West Parkway • Eden Prairie, MN 55344 USA

6904-300070 00

IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS – PLEASE READ ENTIRE MANUAL PRIOR TO USE

Before getting started, let's make sure this mount is perfect for you!

 
Does your TV (including accessories) weigh more than 135 lbs. (61 kg)?



Yes — This mount is NOT compatible. Visit MountFinder.Sanus.com or call 1-800-359-5520 to find a compatible mount.

What is your wall made of?







Drvwall with wood studs? Perfect!



  Do vou have all of the tools needed?









5/16 in. (8 mm)

Applications

Ready to begin?

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-800-359-5520.


CAUTION: Avoid potential personal injuries and property damage!

- This product includes directions and hardware for use with wood studs DO NOT install into drywall alone.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.


Parts and Hardware

WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

NOTE: Not all hardware included will be used.

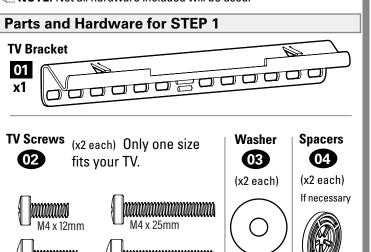

Parts and Hardware for STEP 2

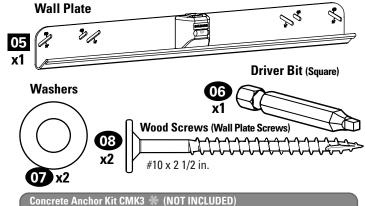


- For concrete installations:
- Contact customer service at 1-800-359-5520 to have these anchors shipped directly to you.



2.5mm

5mm

 Parts for STEP 3 (OPTIONAL)




Part for Adjustments





*** A WARNING: This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5 in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.


Attach TV Bracket to TV

1.1 Select Your TV Screws

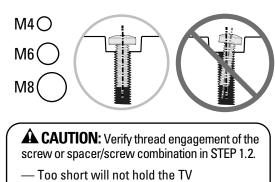

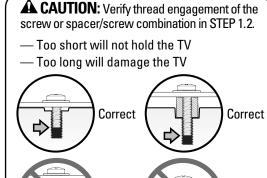

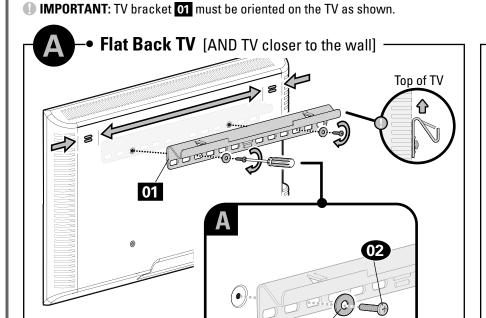


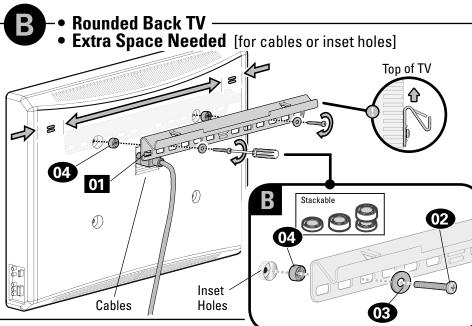

CONCRETE OPTION 2B

Attach Wall Plate to Wall

2.1A Verify Your Wall

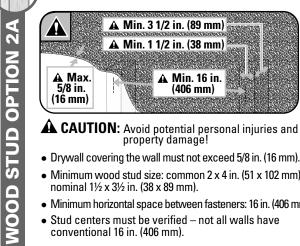


A CAUTION: Avoid potential personal injuries and property damage


- Drywall covering the wall must not exceed 5/8 in. (16 mm).
- Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 11/2 x 31/2 in. (38 x 89 mm)
- Minimum horizontal space between fasteners: 16 in. (406 mm).
- Stud centers must be verified not all walls have conventional 16 in. (406 mm).

2.2A Find the Stud Centers

 
1.2 Attach the TV Bracket

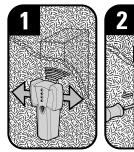





 studs using a with an awl or stud finder. drill bit to verify the stud edges.





both studs.

Position wall plate 05 at your desired height. Level, then mark the two hole locations.

Center TV bracket 01 on your TV's TOP hole pattern and securely attach using hardware configuration A or B, depending on your TV needs.


2.3A Attach the Wall Plate

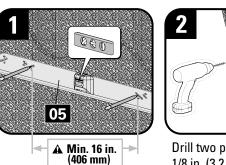

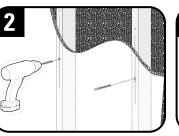

Drill two pilot holes using a 1/8 in. (3.2 mm) drill bit.

IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (63 mm).

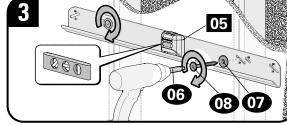


Install wall plate 05 with two washers 07 and screws 08, using bit 06.

Adjust leveling, if needed, then securely tighten both screws 08.

CAUTION: Improper use could reduce the holding power of screws **08**. DO NOT over-tighten the screws.

2.1B Verify Your Wall

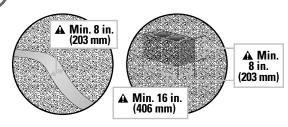

A CAUTION: Avoid potential personal injuries and property damage!


- Minimum solid concrete thickness: 8 in. (203 mm).
- Minimum concrete block size: 8 x 8 x 16 in. (203 x 203 x 406 mm).
- Minimum horizontal space between fasteners: 16 in. (406 mm).
- Mount wall plate **05** directly onto the concrete surface.

2.2B Attach the Wall Plate

Position wall plate 05 at your


desired height. Level, then

mark the two hole locations.

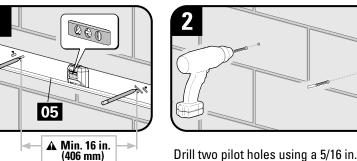


Drill two pilot holes using a 5/16 in. (8 mm) masonry drill bit.

IMPORTANT: Pilot holes must be drilled to a depth of 2.75 in. (70 mm). Never drill into the mortar between blocks.

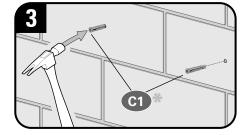

Insert two anchors C1 (Fischer UX8x50R included in Concrete Anchor Kit CMK3*)

A CAUTION: Be sure the anchors are seated flush with the concrete surface.

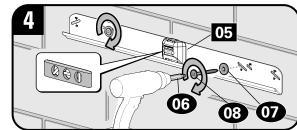

Install wall plate 05 with two washers 07 and screws 08, using bit 06. Securely tighten both screws 08

A CAUTION: Improper use could reduce the holding power of screws **08**. DO NOT over-tighten the screws.